



1000 Yarnell Place, Oxnard, CA 93033
(805) 486-6644 Fax (805) 486-6684

Part # 500069

2010-2012 Camaro Stainless Steel Brake Line

Red, Blue and Clear all covered

Installation of the Granatelli Stainless Steel Brakes lines is as simple as remove and replace. We recommend you have this done by an installation professional if you do not feel comfortable. Always take special care as to keep the brake fluid away from ALL PAINTED surfaces. Brake fluid is highly corrosive to paint.

Note: In some 2011 and 2012 model year vehicles that is a D shaped pattern where the Granatelli Stainless lines mate to the factory steel tubing. The instructions below are meant to guide you through this simple process.



Remove the bolt holding the brake line bracket using a 10mm wrench or socket



The top line in the picture is stock and the bottom line is your new Granatelli Stainless line. The picture to the right show the D shape bracket in it stock form




Drill the D shaped hole into a perfect circle 5/8" circle



Shown above, This is how easy it is to modify your brackets. The picture to the right shows the retaining clip installed. This is for reference only. It is not recommended that this clip be installed until after the lines are mated.



Pictures above represent a view of the rear brackets – The same applies. Drill D shape into a perfect circle

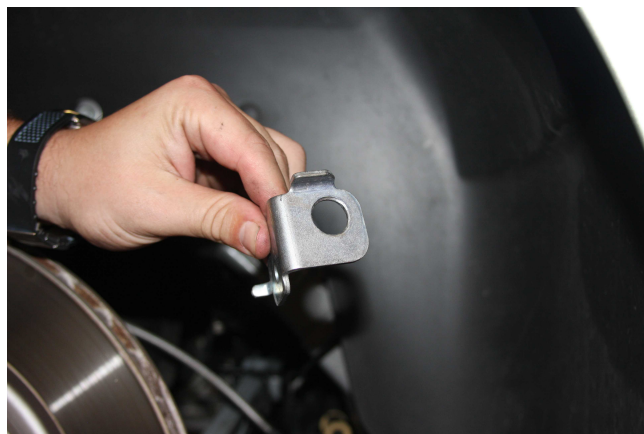

Thank you for your Granatelli Motor Sports purchase.
For technical assistance Call 805-486-6644